

REQUIRED ITEMS

1. Tools
 - Flat head screwdriver
2. New Piston Seal.

3-step replacement process:

1. Pull down the piston with the lever, 5 times.
2. Use a flat head screw driver to pry of the seal. Use the metal part of the piston to support the screw driver, not the black plastic bottom part.
3. Use your fingers to remove the seal.
4. Install the new seal. Make sure to install it in the right direction, see picture.

Well done! Enjoy your espresso now!

